

OPERATING INSTRUCTIONS AND PARTS MANUAL

150 MM AIR HAMMER (Round/Hex) (Model: AT-2070NR / AT-2070NH)

Thanks for your Purchase.

Please read this Instruction Manual carefully
and thoroughly before operating the tool to do your best jobs.



AT-2070NR

AT-2070NH



Revision: 01 (2010)

WARRANTY AND SERVICE

We (the manufacturers) warrant all products we sell to be free from defects in materials and workmanship for a period of 360 days from the original purchase date. This warranty does not apply to effects due directly or indirectly to abuse, misuse, negligence, normal wear and tear down or improper maintenance, nor shall it apply to any product that has been repaired or altered outside of our facilities. Should any product fail to provide satisfactory service, call your distributor for return authorization but to be accompanied with proof of purchase and an explanation for the return.

We make no other warranty, expressed and/or implied. We shall in no event be liable for death, injuries to persons or property, or for incidental, consequential, indirect or special damages of any nature arising from the sale or use of the products, excepting only the cost or expense of repair and replacement as described above. This warranty gives the customer specific legal rights. Other legal rights may vary from state to state.

WHO IS COVERED?

This warranty covers only the initial purchaser of the product.

HOW TO GET SERVICE

The product or part must be returned to the distributor or sales agent for examination. You must provide proof of initial purchase date and an explanation of the complaint must accompany the merchandise. If our inspection discloses a defect, we will repair or replace the product, or refund the purchase price, at our option. We will return the repaired product or replacement at our expense unless it is determined by us that there is no defect, or that the defect resulted from causes not within the scope of our warranty in which case we will, at your direction, dispose of or return the product. In the event you choose to have the product returned, you will be responsible for the shipping and handling costs for the return.

SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product. If you have any questions regarding the product, please contact the distributor or sales agent.

⚠️ WARNINGS IMPROPER OPERATION OR MAINTENANCE OF THIS PRODUCT COULD RESULT IN SERIOUS INJURY AND PROPERTY DAMAGE. READ AND UNDERSTAND ALL WARNINGS AND OPERATION INSTRUCTIONS BEFORE USING THIS EQUIPMENT. WHEN USING AIR TOOLS, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED TO REDUCE THE RISK OF PERSONAL INJURY.

⚠️ WARNINGS RISK OF EYE OR HEAD INJURY 	
WHAT COULD HAPPEN	HOW TO PREVENT IT
<ul style="list-style-type: none"> Air powered equipment and power tools are capable of propelling materials such as fasteners, metal chips, sawdust and other debris at high speed which could result in serious eye injury. 	<ul style="list-style-type: none"> Always wear ANSI approved Z87.1 safety glasses with side shields. Never leave operating tool unattached. Disconnect air hose when tool is not in use.
<ul style="list-style-type: none"> Compressed air can be hazardous. The air system can cause injury to soft tissue areas such as eyes, ears, etc. Particles or objects propelled by the stream can cause injury. 	<ul style="list-style-type: none"> For additional protection use an approved face shield in addition to safety glasses.
<ul style="list-style-type: none"> Tool attachments can become loose or break and fly apart propelling articles at the operator and others in the work area. 	<ul style="list-style-type: none"> Make sure that any attachments are securely assembled.

⚠️ WARNINGS RISK OF FIRE OR EXPLOSION 	
WHAT COULD HAPPEN	HOW TO PREVENT IT
<ul style="list-style-type: none"> Abrasive tools such as sanders and grinders, rotating tools such as drills, and impact tools such as nailers, staplers, wrenches, hammers and reciprocating saws are capable of generating sparks, which could result in ignition of flammable materials. 	<ul style="list-style-type: none"> Never operate tools near flammable substances such as gasoline, naphtha, cleaning solvents, etc. Work in a clean, well-ventilated area free of combustible materials. Never use oxygen, carbon dioxide or other bottled gases as a power source for air tools.
<ul style="list-style-type: none"> Exceeding the maximum pressure rating of tools or accessories could cause an explosion resulting in serious injury. 	<ul style="list-style-type: none"> Use compressed air regulated to a maximum pressure at or below the rated pressure of any attachments. Never connect to an air source that is capable of exceeding 200 psi. Always verify prior to using the tools that the air source has been adjusted to the rated air pressure range.

⚠️ WARNINGS RISK OF LOSS OF HEARING 	
WHAT COULD HAPPEN	HOW TO PREVENT IT
<ul style="list-style-type: none"> Long term exposure to noise produced from the operation of air tools can lead to permanent hearing loss. 	<ul style="list-style-type: none"> Always wear ANSI S3.19 hearing protection.

⚠️ WARNINGS INHALATION HAZARD 	
WHAT COULD HAPPEN	HOW TO PREVENT IT
<ul style="list-style-type: none"> Abrasive tools, such as grinders, sanders and cut-off tools generate dust and abrasive materials, which can be harmful to human lungs and respiratory system. 	<ul style="list-style-type: none"> Always wear properly fitting facemask or respirator when using such tools.
<ul style="list-style-type: none"> Some materials such as adhesives and tar contain chemicals whose vapors could cause serious injury with prolonged exposure. 	<ul style="list-style-type: none"> Always work in a clean, dry, well-ventilated area.

⚠ WARNINGS RISK OF INJURY 	
WHAT COULD HAPPEN	HOW TO PREVENT IT
<ul style="list-style-type: none"> A tool left unattended, or with the air hose attached, can be activated by unauthorized persons leading to their injury or injury to others. 	<ul style="list-style-type: none"> Remove air hose when tool is not in use and store tool in secure location away from reach of children and untrained users.
<ul style="list-style-type: none"> Air tools can propel fasteners or other materials throughout the work area. 	<ul style="list-style-type: none"> Use only parts, fasteners and accessories recommended by the manufacturer. Keep work area clean and free of clutter. Keep children and others away from tool while it is in operation. Keep work area well lit.
<ul style="list-style-type: none"> A wrench or a key that is left attached to a rotating part of the tool increases the risk of personal injury. 	<ul style="list-style-type: none"> Remove adjusting keys and wrenches before turning the tool on.
<ul style="list-style-type: none"> Using inflator nozzles for duster applications can cause serious injury. 	<ul style="list-style-type: none"> DO NOT use inflator nozzles for duster applications.
<ul style="list-style-type: none"> Air tools can become activated by accident during maintenance or tool changes. 	<ul style="list-style-type: none"> Remove air hose to lubricate or add grinding attachments, sanding discs, drills, etc. to the tool. Never carry the tool by hose. Avoid unintentional starting. Don't carry hook-up tool with finger on trigger. Only an authorized service representative should do repair servicing.
<ul style="list-style-type: none"> Air tools can cause the workpiece to move upon contact, leading to injury. 	<ul style="list-style-type: none"> Use clamps or other devices to prevent movement.
<ul style="list-style-type: none"> Loss of control of the tool can lead to injury to self or others. 	<ul style="list-style-type: none"> Never use tool while using drugs or alcohol. Don't overreach. Keep proper footing and balance. Keep handles dry, clean and free from oil/grease. Stay alert. Watch what you are doing. Use common sense. Do not operate tool when you are tired.
<ul style="list-style-type: none"> Poor quality, improper or damaged tools such as grinding wheels, chisels, sockets, drills, nailers, staplers, etc., can fly apart during operation, propelling particles throughout the work area causing serious injury. 	<ul style="list-style-type: none"> Always use tool attachments rated for the speed of the power tool. Never use tools, which have been dropped, impacted or damaged by use. Use only impact grade sockets on an impact wrench. Do not apply excessive force to the tool; let the tool perform the work.
<ul style="list-style-type: none"> Fasteners could ricochet or be propelled causing serious injury or property damage. 	<ul style="list-style-type: none"> Never point discharge of tool at self or others. Do not pull trigger unless tool contact safety device is against work surface. Never attempt to drive fasteners into hard surfaces such as steel, concrete, or tile. Avoid driving a fastener on top of another fastener. Position tool carefully so that fasteners will be delivered to the proper location.
<ul style="list-style-type: none"> Improperly maintained tools and accessories can cause serious injury. 	<ul style="list-style-type: none"> Maintain the tool with care. Keep a cutting tool sharp and clean. A properly maintained tool, with sharp cutting edges, reduces the risk of binding and is easier to control.
<ul style="list-style-type: none"> There is a risk of bursting if the tool is damaged. 	<ul style="list-style-type: none"> Check for misalignment or binding of moving parts, breakage of parts and any other condition that affects the tool's operation. If damaged, have the tool serviced before using.
<ul style="list-style-type: none"> Use only accessories identified by the manufacturer to be used with specific tools. 	<ul style="list-style-type: none"> Use of an accessory not intended for use with the specific tools increase the risk of injury to persons.

⚠ WARNINGS RISK OF ELECTRIC SHOCK 	
WHAT COULD HAPPEN	HOW TO PREVENT IT
<ul style="list-style-type: none"> Using air tools to attach electrical wiring can result in electrocution or death. 	<ul style="list-style-type: none"> Never use nail/staplers to attach electrical wiring while energized.
<ul style="list-style-type: none"> This tool is not provided with an insulated gripping surface. Contact with a "live" wire will also make exposed metal parts of the tool "live" and can result in electrocution or death. 	<ul style="list-style-type: none"> Avoid body contact with grounded surfaces such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is grounded.
<ul style="list-style-type: none"> Fasteners coming in contact with hidden electrical wiring could cause electrocution or death. 	<ul style="list-style-type: none"> Thoroughly investigate the workpiece for possible hidden wiring before performing work.

⚠ WARNINGS RISK OF ENTANGLEMENT 	
WHAT COULD HAPPEN	HOW TO PREVENT IT
<ul style="list-style-type: none"> Tools which contain moving elements, or drive other moving parts, such as grinding wheels, sockets, sanding discs, etc., can become entangled in hair, clothing, jewelry and other loose objects, resulting in severe injury. 	<ul style="list-style-type: none"> Never wear loose fitting clothes or apparel that contains loose straps or ties, etc., which could become entangled in moving parts of the tools. Remove any jewelry, watches, identifications, bracelets, necklaces, etc., which might become caught by the tool. Keep hands away from moving parts. Tie up or cover long hair. Always wear proper fitting clothing and other safety equipment when using the tool.


⚠ WARNINGS RISK OF CUT OR BURNS 	
WHAT COULD HAPPEN	HOW TO PREVENT IT
<ul style="list-style-type: none"> Tools that cut, shear, drill, staple, punch, chisel, etc. are capable of causing serious injury. 	<ul style="list-style-type: none"> Keep the working part of the tool away from hands and body.

- ⚠ WARNINGS**
- Replace warning labels if they become obscured or removed.**
 - Do not use this tool for other than its intended use.**
 - Excessive air pressure or too much free rotation will decrease the life of the tool and may cause a hazardous situation.**
 - Check air hose for wear, and keep them away from heat and sharp edges. Do not carry the tool by the air hose.**
 - Slip / trip / fall is a major cause of serious injury or even death. Be aware of excess hose left on your walking way or on the working surface and be aware of the whipping air hose too.**
 - Continuous operation and bad working condition will injure hands. Once hand numbs or aches, operator shall stop the tool for a while for relaxing and re-start the work after recovery. Operator shall immediately see a doctor if such a serious symptom occurs.**
 - All persons not using the tool should stay a safe distance away from the work area while the tool is in use. Keep children away.**
 - This product may contain one or more chemicals known to cause cancer and birth defects or other reproductive harm. Wash hands after handling.**

SETTING UP AIR LINE FOR TOOL OPERATION

Air Supply

- Make sure that the air compressor being used for the air tool operation supplies the correct output (CFM).
- Have the tool in the “off” position when connecting the tool to the air supply.
- Use normal 90 psi working pressure for best tool performance while running the tool. High pressure and unclean air will shorten the tool life due to faster wear and also may create a hazardous situation.
- Drain water from air compressor tank daily, as well as any condensation in the air lines. Water in the air line may enter the tool and damage the tool mechanisms at operation.
- Clean the air inlet filter cartridge weekly. The recommended hook-up procedure can be viewed in the said diagram.
- Line pressure should be increased accordingly to make up for extra long air hoses (usually over 8 meters). The minimum hose diameter should be 1/4 in.(inner diameter) and the fittings should have the same inside dimensions. But usually a 3/8 in. I.D. air hose is recommended for air supply to get the best function of air tool operation.
- Use proper hoses and fittings. We do not suggest connecting quick change couplings directly to the tool since they may cause failure due to vibration. Instead, add a leader hose and connect coupling between air supply and hose whip.
- Check hoses for wear before individual use. Make certain that all connections are in security.

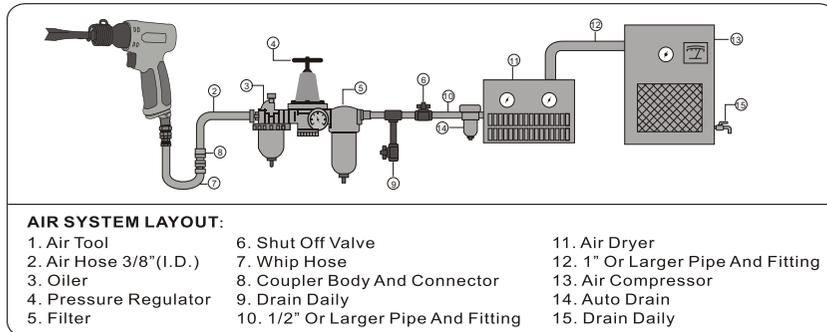

Important Notice

1. Working pressure refers to the air line pressure set to the tool when the tool is under working conditions (i.e. the tool has been started). It does NOT refer to the air pressure from air compressor.
2. An air hose (3/8" x 50 ft. air hose is the most common one in stores) may cause up to 15 PSI drop in pressure from the air compressor to the tool, so you may need to set the output air pressure of compressor higher to maintain the required pressure at the tool.
3. An individual air tool has its specification of air consumption (CFM). Check the specifications of your compressor to be sure that it can support both minimum CFM (cubic feet per minute) and PSI (pounds per square inch) required.

SPECIFICATIONS

Item number	AT-2070NR/AT-2070NH
Chisel shank.....	0.401 IN. (10.185 MM)
Bore diameter (ID)	3/4 IN. (19.05 MM)
Stroke length	1-5/8 IN. (41 MM)
Blow per minute	4,500 B.P.M
Average air consumption	4.5 SCFM
Working pressure	90 PSI (6.3 BAR)
Air inlet	1/4 IN.
Air hose	3/8 IN. (inside diameter)
Length x height.....	5.51 x 6.50 IN. (140 x 165 MM)
Weight	1.23 KGS (2.72 LBS)

PACKAGING CONTENTS

Description	Quantity
150 mm Air Hammer	1
Spring Retainer	1
Chisel	4
Male Plug	1
Manual	1

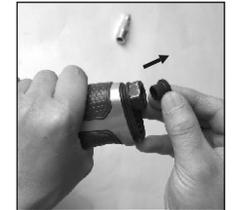


Figure 1

PREPARATION

Before beginning assembly or operation of the product, make sure that all parts are present. Compare the parts with the package contents list. If any part is missing or damaged, do not attempt to assemble, install or operate the product. Contact the distributor or sales agent for replacement.

OPERATING INSTRUCTIONS

1. Remove the air inlet protective cap from the air hammer (A). (See Figure 1)
2. Mount a male plug (not included) by hand into the air inlet (F). (See Figure 2)



Figure 2

3. Place 2- 3 drops of air tool oil (not included) into the male plug before each use. (See Figure 3)

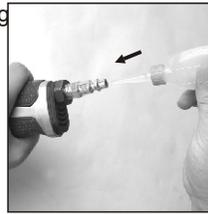


Figure 3

4. Insert a chisel (C) into the opening of cylinder (E). (See Figure 4)

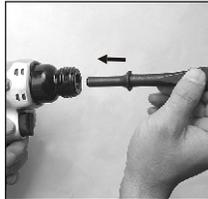


Figure 4

5. Screw the spring retainer (B) onto the cylinder (E) and firmly secure it. (See Figure 5)



Figure 5

6. Connect air supply hose to the air hammer (A). Set the air pressure at 90 PSI. (See Figure 6)

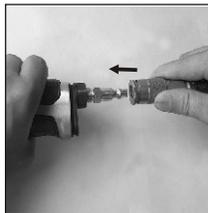


Figure 6

1. Press the trigger (D) to start the tool. (See Figure 7)




Figure 7

TROUBLESHOOTING

Problem	Possible Cause	Corrective Action
Tool runs slowly or will not operate	<ol style="list-style-type: none"> Grit or gum in tool. No oil in tool. Low air pressure. Air hose leaks. Pressure drops. Worn rotor blade. Moisture blowing out of tool exhaust. 	<ol style="list-style-type: none"> Flush the tool with air-tool oil or gum solvent. Lubricate the tool according to the lubrication instructions in this manual. <ol style="list-style-type: none"> Adjust the regulator on the tool to maximum setting. Adjust the compressor regulator to tool maximum of 90 PSIG. Tighten and seal hose fittings if leaks are found. Use sealing tape. <ol style="list-style-type: none"> Be sure the hose is the proper size. Long hose or tools using large volumes of air may require a hose with an I.D. of 1/2 in. or larger depending on the total length of the hoses. Do not use a multiple number of hoses connected together with quick-connect fittings. This causes additional pressure drops and reduces the tool power. Directly connect the hoses together. Replace rotor blade. Water in tank: drain tank. (See air compressor manual). Oil tool and run until no water is evident. Oil tool again and run 1-2 seconds.
Abnormal vibration and/or excessive heat develops in the tool.	Improper lubrication.	Follow proper lubrication procedures in this manual.

NOTE: For any special troubles which cannot be settled down by the operator, contact the distributor or sales agent from whom you purchase the tool.

EXPLODED DIAGRAM AND PARTS LIST

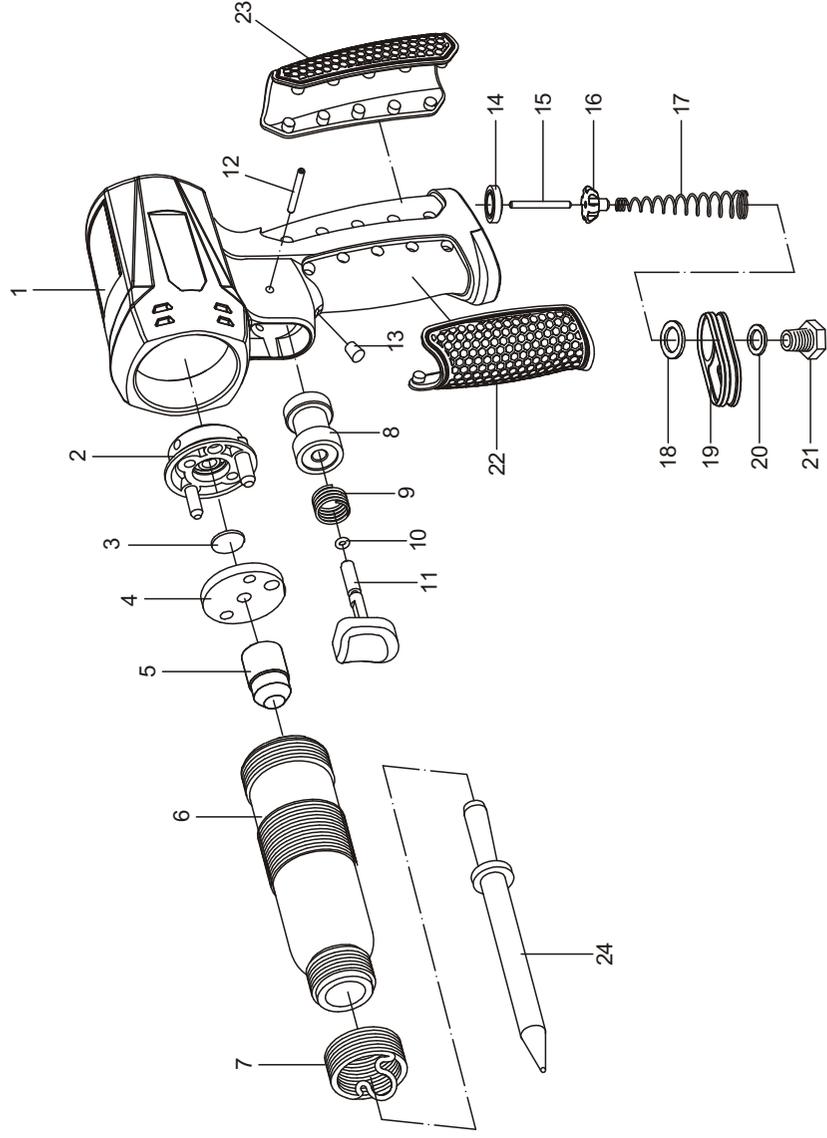

Part No.	Description	Qty.	Part No.	Description	Qty.
1	Housing	1	13	Plug	1
2	Valve seat	1	14	Oil seal	1
3	Valve	1	15	Pin	1
4	End cap	1	16	Pin cover	1
5	Piston	1	17	Spring	1
6	Cylinder	1	18	Washer	1
7	Spring retainer	1	19	Exhaust deflector	1
8	Trigger sleeve	1	20	Spacer	1
9	Spring	1	21	Air inlet	1
10	O-ring	1	22	Soft grip	1
11	Trigger	1	23	Soft grip	1
12	Set pin	1	24	Chisel	4

- Contact the distributor or sales agent from whom you purchase the tool for spare parts ordering for any necessary replacement to get continuous use of tool and for extending the tool life.
- When ordering spare parts and components, give each part number and order quantity.

Thank you.